

SPECIFICATIONS

Output Voltage: 16.5 VAC \pm 0.5 VAC RMS (33 RPM)

Output Voltage: 16.5 VAC \pm 0.5 VAC RMS (45 RPM)

Phase: 90 degrees \pm 5 degrees

DC Offset: <50 mV

THD+N: < 0.1%

Output Impedance: < 0.5 ohm

Dimension: (W x D x H) 90 x 140 x 50 mm
3 9/16 x 5 1/2 x 11 5/16"

All specifications are liable to change without notice. E&OE

Printed in England



CONTACT US

Roksan
24 Brook Road,
Rayleigh, Essex
SS6 7XJ, UK
+44 (0)1268 798900
info@roksan.com
roksan.com

ACCESSORIES

5 to 4 pin XPS Adaptor

Converts XPS 8 for use with the original
Xerxes Turntable.



XPS 8
Xerxes Power Supply

ANALOGUE

INTRODUCTION

Thank you for purchasing this XPS 8 Xerxes Power Supply.

Please study these instructions carefully. Correct installation of your XPS 8 Xerxes Power Supply will enhance the sound quality of your turntable.

The XPS 8 Xerxes motor drive utilises improved circuitry to the older XPS motor drives and offers fantastic value as a starter power supply for the Xerxes 20 Plus turntable or an upgrade for the older model XPS I, II, III, 3.5 and XPS 7 motor drives. It is important to note that the XPS 8 comes with the standard 5-pin connector for use with Xerxes X, Xerxes 20 and Xerxes 20 Plus turntables.

It requires an adaptor cable converting it to a 4-pin connector for use with the original Xerxes turntable. The XPS 8 can also be used as an upgrade with the Radius and Radius 3 turntables, however the Radius turntable will require modification.

CONNECTION & USE

Follow these few simple steps to use the XPS 8 Power Supply with your Xerxes turntable

1. Connect the supplied IEC mains lead to the socket on the rear of the XPS 8 (1). Then plug it into the mains supply.
2. Carefully attach the XPS 8 Output Cable connector to the Xerxes Input Socket on the back of your turntable.
3. Set the Speed Control Switch (7) to 33 RPM. When playing 45 RPM records, please start the XPS 8 in 33 RPM mode changing it to 45 RPM once the platter has reached a stable speed.
4. Switch the Mains Power Switch (5) on the front panel of the XPS 8 to the '1' (on) position, the Power Indicator LED (6) will illuminate.
5. When finished listening to the Xerxes, simply turn the Mains Power Switch to the '0' (off) position.

SAFETY PRECAUTIONS



NOTE: This product must be earthed.

Please ensure that other equipment connected to it is earthed according to the manufacturer's instructions.



Roksan Audio declares that the apparatus XPS 8 Xerxes Power Supply complies with the essential requirements and other relevant provisions of Directive 1999/5/EC.

CARE

After disconnecting the XPS 8 from the mains supply, the unit may be cleaned with a lightly dampened soft cloth or chamois leather.

Avoid using abrasives or solvents.

WARRANTY

There are no user serviceable parts inside your XPS 8 Xerxes Power Supply. Your Roksan XPS 8 warranty covers any defect in materials and workmanship for a period of **five** years from the date of purchase.

This warranty excludes:

1. Damage caused due to accident, misuse, neglect and incorrect installation, adjustment or repair.
2. Liability for damage or loss during transit from the retailer or purchaser to Roksan or its authorised distributor for the purposes of repair or inspection.

All claims under this warranty must be made through an authorised Roksan retailer.

If equipment returned for repair to Roksan is found on inspection to comply with the product specification Roksan reserves the right to make a charge for examination and return carriage.

Unauthorised servicing will void this warranty.

